

Q B E L L

ToastEase 2 Slice LED Toaster

Effortless toast perfection



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

QBTOA2

CONTENTS

General Safety	4
Product Overview	9
Before the first use	10
Operating instructions	11
Cleaning & Maintenance	13
Storage	13
Troubleshooting	14
Specifications	15
Customer Helpline	Last Page

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the product.

The safety precautions instructions reduce the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

GENERAL SAFETY (Cont.)

- Do not use this toaster for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- When using the toaster, it must be on a stable, secure, dry and level surface, out of children's reach, to prevent damage or injury.
- DO NOT operate the toaster under the following conditions:
 - * In a damp place or in areas with high humidity (such as in a bathroom)
 - * On or near a hot cooktop, in a heated oven, or near an open flame.
 - * On a metal tray.
 - * In confined spaces or under overhanging furniture/structures.
- The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.
- **WARNING:** Do not put anything else (such as oversized food, metal foil packages or utensils) into the toasting slots. Doing so may create a fire or electric shock hazard.
- **Crumb tray:** To avoid the risk of fire, remove crumbs from the crumb tray after each use. Pull the crumb tray out completely, discard the crumbs and wipe it clean with a dry or damp cloth. Make sure the tray is dry and properly in place before reuse.

GENERAL SAFETY (Cont.)

- Do not leave the toaster unattended when the power is turned on.
- Ensure the toaster is switched off before removing it from the base.
Do not move the appliance while it is switched on.
- Always unplug the toaster from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the toaster and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

CAUTION: HOT!

- Do not touch any part of the toaster housing when it is in use. The surfaces get hot. Only touch the handle. Do not put any part of your hand or body near the toaster when it is turned on.
- Take care when handling the toaster after use.
- **WARNING:** Do not place your hand inside the toaster while in use.
Wait for the toaster to complete toasting, and push up the bread for it to then be easily removed.
- The toaster heats up and can cause burns. The temperature of accessible surfaces, especially the toaster's metal parts, can become very hot when the appliance is operating. Do not touch hot surfaces during or immediately after use. Use handles or knobs.
- Always use oven mitts when handling hot material and allow metal parts to cool before cleaning.
- Take care when taking out hot bread slices after toasting to avoid injuries.
- The product is not intended to be operated by means of an external timer or separate remote-control system.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.

GENERAL SAFETY (Cont.)

- Do not leave the toaster unattended when the power is turned on.
- Ensure the toaster is switched off before removing it from the base.
Do not move the appliance while it is switched on.
- Always unplug the toaster from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the toaster and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in, or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

- The electrical rating of the extension cord should be at least that of the appliance. If the electrical rating of the extension cord is too low, it could overheat and burn.
- The resulting extended cord should be arranged so that it will not drape over the counter-top or tabletop where it can be pulled on by children or tripped over.

GENERAL SAFETY(Cont.)

ELECTRICAL SAFETY AND POWER CORD HANDLING

- Before connecting the toaster to the power supply, make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the toaster.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the toaster itself in water or other liquid. Do not expose the electrical connections to water.
- Avoid spillage on the connector.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. Do not let it touch hot surfaces. The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently.
- Do not pick up or operate the appliance if the power supply cord, plug, or toaster housing is damaged, or after it malfunctions or has been damaged in any manner.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. In case of damage, contact our after sales support centre for advice.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farmhouses
- Hotel, motel and other residential-type environments
- Bed and breakfast-type environments. The appliance must not be immersed.

CAUTION: Do not operate the toaster on an inclined plane.

PRODUCT OVERVIEW

CONTROL PANEL

Toast Level




Toast Time

Toast Shades
+ white bread

Bagel / Gluten Free / Multigrain
selection

Cancel/ Crumpet / Defrost
selection

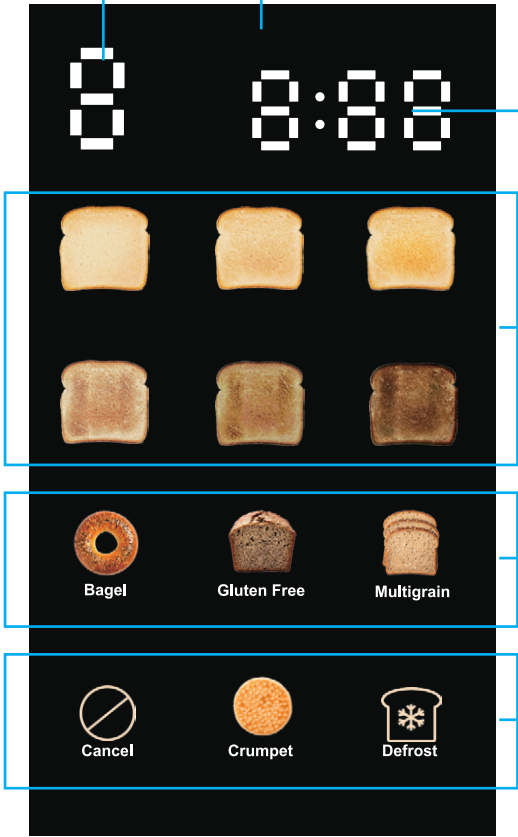

BEFORE THE FIRST USE

- Remove all packaging materials and/or other transportation means.
- Check the package contents to verify that everything is complete and undamaged. Do not operate the appliance if the content is incomplete or appears damaged. Return it immediately.

Danger of suffocation!

- Packaging materials are not toys. Always keep plastic bags, foils and foam parts away from babies and children. Packaging material could block airways and prevent breathing.

NOTE:

- The appliance may produce an odor and/or emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.
- Always use the appliance with the crumb tray.
- When using the appliance for the first time, it is recommended to operate it for at least twice on its highest temperature setting until no odor or smoke is present. During use, ensure ample ventilation.
- Let the appliance cool completely.
- Clean the appliance.
- The appliance has a rated power of 850W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 220-240V~ 50-60Hz wall outlet.
- Do not connect the appliance to a wall outlet unless it is fully assembled.
- Make sure no food or other objects are inside the toasting slots.
- Place the appliance on a clean, flat and heat-resistant surface.
- When using the appliance on wooden furniture, use a heat-resistant mat to protect the wood from damages. Ensure a minimum distance of at least 4 inches around the appliance from other objects, cupboards, and walls.

WARNING:

- Only use accessories recommended by the manufacturer. Do not use any other accessories with the appliance.
- Do not cover or insert any objects into the air vents.
- Never let the power cord come in contact with the housing of the appliance during use.
- Do not toast torn or large/thick pieces of toast/bagels, as it may become lodged in the toasting slots.
- Make sure the crumb tray is free of food residues and inserted properly. Never use the appliance without the crumb tray.
- Insert the plug into a wall outlet.
- Remove any protective wrappings from the toast/bagels before placing them in the toasting Slots.

OPERATING INSTRUCTIONS

- Factors such as bread size, thickness, moisture or sugar content, temperature, shape, and most of all, height, can affect evenness of browning.
- If your bread gets squished during the toasting process, it may result in uneven browning, leaving some spots white and soft and some brown and crisp.
- If toasting multiple rounds of slices back-to-back, toasting time will be automatically adjusted/reduced for optimal results. This allows the user to still achieve the shade of their choice when the unit is already hot.
- This appliance can be used to toast plain, fresh or frozen toast/bagels and toaster pastries. Do not use for any other foods. Never place any objects in the toasting slots.
- After plugging the toaster, the screen will light up and then turn off.
- Touch any button to turn screen on.
- Press the toasting lever down, until it locks in place to switch the heating elements on.
- If toasting frozen bread or bagel, select the Defrost function (this will add time to the timer shown on the screen) If toasting a bagel, select the bagel function. (This will add time to the timer shown on the screen.)

NOTE:

- The toasting lever will only remain in the downward position if the appliance is connected to an energized wall outlet.
- To stop or interrupt any cycle, touch the CANCEL button. The toasting lever and contents will pop up.
- Do not force the toasting lever up. Always use the CANCEL button to switch the appliance off.

DANGER OF BURNS!

- Always pay special attention when placing or removing contents from the toasting slots. Toasted food and toasting slots get hot, pay attention when removing toasted food. Use suitable non-metal utensils if required.
- Once the toasting cycle is completed, the toasting lever and contents of the toasting slots will pop up and the CANCEL Button will turn off.

NOTE:

This appliance is equipped with a lift-up function to assist in removing toasts from the toasting slots. Pull the toasting lever upwards to lift the toasts for easier removal.

- Once you have finished using the appliance, remove the plug from the wall outlet.

OPERATING INSTRUCTIONS (Cont.)

TOASTING FUNCTION

- Place the bread slices into the toasting slots. Select the required browning level by selecting the desired shade
- Press the toasting lever down, until it locks in place. The toasting cycle begins.
- Once the toasting cycle is completed, the toasting lever and contents will pop up.

BAGEL FUNCTION

- Use the bagel function to toast bagels.

NOTE:

- Bagels must be cut in half. Do not force them into the toasting slots.
- When using the bagel function, place the inside of the bagel facing the outer sides of the appliance. Ensure each bagel half is correctly positioned in its respective slot, with the cut side facing the outer heating elements.
- Place the bagel halves into the toasting slots.
- Press the toasting lever down and then touch the bagel function button, this starts the bagel toasting cycle.
- Once the bagel cycle is completed, the toasting lever and toasted bagel will pop up and button light will turn off.

DEFROST FUNCTION

Use the defrost function to defrost and toast plain frozen toast or frozen bagels. For bagels, please also refer to the Bagel function.

- Place the bread slices into the toasting slots.
- Press the toasting lever down until it locks in place. The DEFROST button will be illuminated.
- Once the cycle is completed, the toasting lever and toasts will pop up and button light will turn off.

CLEANING & MAINTENANCE

Proper maintenance will ensure many years of service from your appliance.

Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any services or repairs to qualified personnel.

WARNING:

Always ensure the appliance is switched off. Disconnect the plug from the wall outlet before cleaning.

Allow all parts of the appliance to cool down completely.

NOTE:

- Do not immerse the power cord with plug or appliance into water or any other liquids.
- Do not use abrasive cleaners, steel wool or scouring pads. Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.
- Clean the surface of the appliance with a damp cloth or sponge and a mild detergent.
- Do not use metal utensils to remove lodged food, as this may result in personal injuries or damage.
- To clean the crumb tray, remove it from the appliance completely. Dispose of any crumbs. Rinse the crumb tray with water and a little detergent. Dry thoroughly with a soft cloth. Reinsert the crumb tray carefully.
- Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet.

STORAGE

- Before storage, always make sure the appliance is completely cool, clean, and dry.
- The power cord can be stored in the cord's storage underneath the appliance.
- It is recommended to store the appliance in a dry place.
- Store the appliance on a stable shelf or in a cupboard. To avoid accidents, ensure that both the appliance and its power cord are beyond reach of children or pets.

TROUBLESHOOTING

Problem	Cause	Solution
The appliance is not working	Appliance not plugged in Wall outlet not energized	Insert the plug into the wall outlet Check fuses and circuit breaker
The appliance heats up, but the button(s) do not light up	Damaged indicator(s)	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The appliance heats up, but the toasting lever does not stay down	Malfunctioning appliance	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The toasting lever is pressed down but the appliance does not heat up	Malfunctioning appliance	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
Toast/bagels are not ejected once the function cycle is completed	Damaged toasting lever Toast/bagels stuck in the toasting slots (torn/too thick/too large)	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance Disconnect the appliance from the wall outlet and allow it to cool down Remove toast/bagels with non-metal utensils
Frozen bread/bagels/waffles are not toasted to the desired level	The DEFROST Button was not touched before the toasting cycle	Place the frozen bread, bagels or waffles into the toasting slots. Press the Toasting Lever down and then touch the DEFROST Button to start a toasting cycle using the defrost function

TROUBLESHOOTING (Cont.)

Problem	Cause	Solution
Toast/bagels are ejected very quickly	Toasting lever not locked in place	Press the toasting lever down until it locks in place. Ensure the appliance is connected to an energized wall outlet
The appliance produces an odor and/or emits smoke	Residues from the production process are eliminated during first use Food type not suitable for toasting Browning level is too high Malfunctioning appliance	Operate the appliance for at least twice on its highest setting, with no food, until no odor or smoke is present Touch the CANCEL Button to stop the cycle and remove the food from the toasting slots, Operate the appliance for at least twice on its highest setting, with no food, until no odor or smoke is present Touch the CANCEL Button to stop the cycle and remove the food from the toasting slots, using suitable non-metal utensils Touch the CANCEL Button to stop the cycle and remove the toast/bagels from the toasting slots, using suitable non-metal utensils. Reduce the browning level for the next set Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance

SPECIFICATIONS

Rating	220-240V-50-60Hz 850W
Unit Dimensions	275 (w) x 175(d) x 197 (h) mm
Gross Weight:	2kgs



SUPPORT: info@ayonz.com
02 8279 8606

DISTRIBUTOR: Ayonz Pty Ltd